



SAAS Boss kit Application Listing
2015

www.shopsaas.com

B/K PART NO	MAKE / MODEL	YEAR	B/K PART NO	MAKE / MODEL	YEAR
	AUSTIN			FAIRLANE	
BK2L	HEALEY SPRITE MK3	1964 - 1967	BK18L	ZA - ZB	1966 - 1969
	CHRYSLER		BK19L	ZC - ZD - ZF	1972 - 1973
BK34L	AP5 - AP6 - DODGE	1963 - 1965	BK19BL	ZG - ZH - ZJ	1973 - 1982
BK35L	VE - VC	1966 - 1968	BK129L	ZK - ZL	1982 - 1988
BK37L	CENTURA	1975 - 1978		LTD	
BK174	CENTURA WITH COLLAPSIBLE COLUMN		BK19L	LTD (ZC - ZD - ZF)	1972 - 1973
BK174	VF - VG - VH - VJ - VK - CL - CM		BK19BL	LTD (ZG - ZH - ZJ)	1973 - 1981
	DAEWOO		BK129L	LTD (ZK - ZL)	1982 - 1988
BK179L	DAEWOO ALL MODELS	UP TO 1996		LASER	
	DAIHATSU		BK32L	ALL MODELS	1981 - 1994
BK153L	FEROZA	1987 - 1994		METEOR	
BK153L	CHARADE	1983 - 1987	BK32L	ALL MODELS	1981 - 1987
BK170L	FEROZA	1994 - ON		TELSTAR	
BK170L	CHARADE	1987 - 1994	BK32L	ALL MODELS	1981 - 1994
BK170L	APPLAUSE	1989 - ON		CORSAIR	
BK170BL	CHARADE	1994 - ON	BK144L	ALL MODELS	1988 - 1996
	DATSUN			FORD RV'S / LIGHT TRUCKS	
BK71L	120Y	1973 - 1979	BK19BL	F100 - F200	1973 - 1982
BK7BL	1200	1970 - 1980	BK132L	F100-F150-F250-F350 BRONCO	1981 - 1991
BK8AL	1600	1977 - 1982	BK31BL	ECONOVAN	1980 - 1983
BK8AL	180B - 180B SSS	1972 - 1977	BK132L	ECONOVAN	1983 - 1991
BK8AL	200B - 200B SSS	1975 - 1984	BK32L	ECONOVAN	1994 - 1997
BK8AL	260C	1975 - 1983	BK32L	COURIER	1983 - 1991
BK8AL	SUNNY	1971 - 1981	BK144L	MAVERICK	1988 - 1996
BK8BL	240Z - 260Z	1970 - 1978		HILLMAN	
BK112L	280ZX	1979 - 1984	BK13L	IMP	
BK144L	300ZX AUST DEL ONLY		BK174	HUNTER	
BK8SL	Stanza	1978-1982		HOLDEN	
	FORD				
CAPRI			BK60L	FJ - FX	1948 - 1956
BK13L	CAPRI (MK1)	1970 - 1972	BK21L	FE - FC - FB - EK	1956 - 1961
BK32L	CAPRI (SA - SE)	1982 - 1994	BK22L	EJ - EH - HD - HR	1962 - 1967
CORTINA			BK23L	HK - HT - HG	1967 - 1971
BK13L	MK1 - MK2	1965 - 1971	BK24	HQ - HJ - HX - WB	1971 - 1980
BK14L	TC - TD	1971 - 1974		SUITS DISHED WHEELS	
BK15L	TD - TE	1974 - 1977	BK24L	HQ - HJ - HX - WB	1971 - 1980
ESCORT				STATESMAN	
BK13L	ESCORT	1970 - 1974	BK24	WB	1980 - 1985
BK16L	ESCORT 1600 - 2000	1970 - 1975		(SUITS DISHED WHEELS)	
BK16AL	ESCORT 1600 - 2000	1975 - 1982	BK24L	WB	1980 - 1985
	FALCON		BK163	VQ	1990 - 1993
BK17L	XK - XL	1960 - 1964	BK163L	VQ	1990 - 1993
BK17AL	XM - XP	1965 - 1967		APOLLO	
BK18L	XR - XT	1966 - 1969	BK159L	JK	
BK19L	XW	1969 - 1970		ASTRA	
BK19L	XA	1972 - 1973	BK144L	ASTRA LB - LD	1984 - 1989
BK19AL	XY	1970 - 1972		BARINA	
BK19BL	XB - XC - XD	1973 - 1982	BK150L	BARINA MB - MH	1985 - 1994
BK132L	XE - XF FALCON / FAIRMONT	1984 - 1988		CAMIRA	
BK129L	XE FAIRMONT GHIA	1982 ON	BK25L	JB - JD - JE	1982 - 1989
BK151L	XF FAIRMONT	1984 - 1988			
BK182L	XG UTE	1997			
BK183L	XH UTE	1997			
BK183L	EF - EL				
BK162L	EA - EB - ED (XR6)	1988 - 1994			

B/K PART NO	MAKE / MODEL	YEAR	B/K PART NO	MAKE / MODEL	YEAR	
COMMODORE				KIA		
BK24	VB - VC - VH (SUITS DISHED WHEELS)	1980 - 1984	MENTOR	MENTOR	1996 - 1998	
BK24L	VB - VC - VH	1980 - 1984	SPORTAGE	SPORTAGE (JA)	1996 - 1998	
BK146L	VK - VL CALAIS	1984 - 1988		LEYLAND		
BK148L	VK - VL	1984 - 1988	BK1L	MORRIS MAJOR / AUSTIN	1958	
BK163L	VN - VP	1988 - 1993	BK1L	MINI 850 - COOPERS - DELUX	1962 - 1972	
BK163BL	VR Only	1994 - 1995	BK2L	MINI 1000 - 1100 - 1300 - 1500	1967 - 1969	
BK163BCL	VS Only	1995 - 1997		MINI DELUX - MINI K - MINI S		
				MINI CLUBMAN - MINI MOKE		
GEMINI			BK5L	MINI	1973 - 1987	
BK25L	TX - TE - RB PIAZZA	1975 - 1987	BK5L	MARINA 1500 - 1750	1972 - 1974	
NOVA				MAZDA		
BK171L	NOVA (LE - LF)	1989 - 1993	BK31BL	1000 - 1200 - 1300 - 1500 - 1600	1961 - 1976	
BK192L	NOVA (LG)	1993 - 1997		RX2 - RX3 - RX4 - RX5		
TORANA			BK31BL	808 - 929 - 323 - 626	1970 - 1985	
BK23L	HB - LC	1969 - 1972	BK32L	323 - 929 - RX7	1983 - 1989	
BK24	LJ- LH - LX - UC - TA (SUITS DISHED WHEELS)	1972 - 1983	BK32L	ASTINA - MX5 - MX6 - EUNOS	1988 - 1998	
BK24L	LJ- LH - LX - UC - TA	1972 - 1983	BK32L	121	1987 - 1998	
CHEVROLET				MAZDA RV'S & LIGHT TRUCKS		
BK92L	CHEV BELAIR - IMPALA	1956 - 1964	BK32L	E1800 - E2000 - E2200 - BRAVO	1994 - 1997	
	HOLDEN RV'S / LIGHT TRUCKS			MG		
BK139L	DROVER	1985 - 1987	BK2L	MIDGET - MK2 - MK3 - MGB	1968 - 1970	
BK145L	RODEO (KB)	1980 - 1988	BK3L	1300 - MK2 -GT	1971 - 1978	
BK25L	RODEO (TF)	1988 - 2003		MITSUBISHI		
BK25L	JACKAROO (L8 - U8)	1991 - 2002		LANCER		
BK26L	BEDFORD	UP TO 1982	BK172L	LANCER - GALANT	1989 - 1992	
	HONDA			BK172BL	CA - CB	1989 - 1992
ACCORD				BK172CL	CC	1992 - 1995
BK30L	ACCORD	UP TO 1989		BK181L	CE - ON	1996 - 1998
PRELUDE				FTO		
BK30L	PRELUDE	UP TO 1987	BK181L	FTO	1993 - 1994	
INTEGRA				MIRAGE		
BK30L	INTEGRA (DA1 - DA3)	1985 - 1989	BK181L	MIRAGE CE	1996 - 1998	
BK30BL	INTEGRA (DA9)	1990 - 1993		CORDIA		
BK30BCL	INTEGRA (DC2)	1994 - 2000	BK133L	CORDIA	1980 - 1982	
CIVIC				MAGNA		
BK30L	CIVIC	UP TO 1988	BK152L	TM - TN - TP - TS	1985 - 1995	
BK30BL	CIVIC (ED)	1988 - 1991	BK181L	MAGNA (TE - TF)	1996 - 1998	
BK30BCL	CIVIC (EG)	1991 - 1996		SIGMA		
CRX				BK90L	GJ - GK - GN	1982 - 1988
BK30BL	CRX (SEC - GEN)	1988 - 1991	BK90L	SCORPION GJ - GK - GL	1980 - 1985	
BK30BCL	CRX (THIRD - GEN)	1992 - 1999		MITSUBISHI RV'S / LIGHT TRUCK		
	HYUNDAI			BK133L	L200 - L300 EXPRESS	1980 - 1982
LANTRA				BK140L	L300 EXPRESS	1983 - 1986
BK173L	LANTRA (J1)	1989 - 1993		BK168L	EXPRESS VAN	1987 - 1998
BK173BCL	LANTRA (J2)	1994 - 1999		BK140L	PAJERO (NA, ND)	1982 - 1988
EXCEL				BK152L	PAJERO (NE, NF, NG)	1988 - 1991
BK173BL	EXCEL (X2)	1991 - 1994		BK168L	PAJERO (NH, NJ, NK, NL, see below)	1991 - 1999
BK173BCL	EXCEL (X3)	1994 - 1998			Non-airbag models	
	JAGUAR					
BK74L	XJ5 - XJ6 SERIES 2 & 3 XJ12	1974 - 1989	BK168L	TRITON (MF - MJ)	1989 - 1998	

B/K PART NO	MAKE / MODEL	YEAR	B/K PART NO	MAKE / MODEL	YEAR
	NISSAN			COROLLA (AE101-AE102)	1994 - 1999
BK144L	GAZELLE (S12)	1984 - 1988	BK138XXL	SPRINTER	1983 - 1986
	NX COUPE (B13)	1991 - 1996			
	SILVIA (S13)	1987 - 1992		CAMRY	
BK128L	MAXIMA (J30)	1990 - 1995	BK138L	CAMRY (V10)	1983 - 1986
BK189L	BLUEBIRD (910)	1981 - 1986	BK159L	CAMRY (V21)	1987 - 1992
BK193L	180SX (S13)	1990 - 1994		CELICA	
	SILVIA (S14)	1993 - 1996	BK40L	TA20 - TA22 - LT1600	1971 - 1973
	200SX (S14)	1994 - 1998	BK41L	LT2000-RA23-RA28-RA40-RA60	1974 - 1982
	MICRA	1995 - 1998	BK41AL	CELICA	1983 - 1989
PULSAR			BK171L	ST162 R	1990 - 1991
BK144L	PULSAR (N12 - N13 - N14)	1983 - 1995		CORONA	
	EXA (PULSAR, N13)	1987 - 1991	BK41L	RT140-RT120-RT132-RT133-T18-2000	1974 - 1983
BK193L	PULSAR (N15)	1995 - 1999		CRESSIDA	
SKYLINE			BK41L	CRESSIDA	1981 - 1982
BK158L	SKYLINE (C210 - C211, R30)	1978 - 1985		DELICA	
BK144L	SKYLINE - PINTARA (R31)	1986 - 1990	BK181L	DELICA	1994 - 1996
BK190BL	R32 IMPORT not for Hicas Model			LEXCEN	
BK190L	R33 IMPORT not for Hicas Model		BK163L	LEXCEN (SAME AS VN COMM)	1988 - 1993
	NISSAN RV'S / LIGHT TRUCK			MR2	
BK8AL	PATROL MQ	1980 - 1985	BK171L	AW11	1985 - 1990
BK144L	PATROL GQ	1988 - 1996	BK138XXL	SW20	1990 - 1998
	NAVARA (D21)	1986 - 1997		SUPRA	
	PATHFINDER (WD21)	1986 - 1995	BK41L	MA61	1981 - 1985
	URVAN	1981 - 1993	BK41AL	MA70	1986 - 1993
BK193L	NAVARA (D22)	1997 - ON	BK41ABL	JZA80	1993 - 1997
	PATHFINDER (WX)	1995 - ON		SOARER	
	PATROL GU *	1997 - 1998	BK41ABL	SOARER	1993 - 1997
	*Steering Shroud may need modification			STARLET	
			BK192L	EP82, EP91	1988 - 1998
	PROTON			PASEO	
BK32L	WIRA	UP TO 1998	BK192L	EL44, EL54	1991 - 1998
	PORSCHE			TOYOTA RV'S / LIGHT TRUCKS	
BK48L	911	UP TO 1990			
	SUBARU		BK41AL	HI-ACE	1977 - 1990
BK121L	LEONE - 1800 - BRUMBY	1979 - 1984	BK69L	HILUX	UP TO 1980
BK177L	L SERIES - SPORTS WAGON	1985 - 1993	BK41L	HILUX / 4 Runner (Without Pins)	1981 - 1988
BK191L	WRX (GC, GF, GM)	1994 - 1999	BK41AL	HILUX / 4 Runner (With Pins)	1981 - 1988
	SUZUKI		BK171L	HILUX 4 Runner	1989 - 1997
BK134L	HATCH-CARRY VAN -MIGHTY BOY	1984 - 1989	BK69L	FJ-HJ-BJ40-42-45-47-55 SERIES	1974 - 1983
BK139BL	Baleno	1995 - 1998	BK41L	HJ60 - FJ60 SERIES	1981 - 1987
SIERRA			BK138L	LANDCRUISER	1985 - 1988
BK139L	SIERRA (J30 - J40, JA - JB)	1981 - 1998	BK138BL	70 SERIES	1984 - 1989
BK139BL	SIERRA (JA12 - JA22 - JB32)	1995 - 1998	BK171L	80 SERIES-100 SERIES-PRA DO	1990 - 1998
SWIFT			BK138L	TARAGO	1984 - 1989
BK150L	SWIFT (ML - MH)	1984 - 1994	BK192L	RAV 4	1994 - 1997
VITARA				VOLKS WAGON	
BK139BL	VITARA	1988 - 1998	BK48L	1200 - 1300 - 1500 - 1600	1960 - 1973
	TOYOTA			MISC	
COROLLA			BK165L	FORKLIFT	
BK39L	KE10 - KE16 - 1000 - 1300	1967 - 1970	BK62AL	BOAT Keyway Shaft	
BK40L	KE20 -1200	1970 - 1974			
BK41L	KE30 - KE36 - KE55 - KE70	1974 - 1980			
BK138L	CSX - SECA - AE SERIES	1985 - 1988			
BK171L	COROLLA (AE92,AE93,AE94,AE95,AE96	1989 - 1994			

Steering wheel & boss kit Fitting Instructions:

Congratulations on the Purchase of a SAAS Boss Kit, whilst the installation is relatively simple it's very important that you follow the fitting instructions step by step in order so it is fitted correctly.

1. Before removing your original steering wheel make sure the front wheels of your car are in a straight position. It is important that these are aligned straight; otherwise your new wheel may be fitted out of line.
2. To remove the original steering wheel horn cover please refer back to the original workshop manual on how this should be carried out so you have access to the nut on the shaft.
3. Once you have taken the horn cover off as per your workshop manual and you have access to the nut, loosen the nut until the nut is flush with the end of the shaft making sure not to completely remove it.
4. To remove the steering wheel a wheel puller will be required (never use a hammer to force off)
5. Now that the steering wheel is removed and you're left with the spline double check to see the wheels have not moved during the removal of the wheel.
6. The Boss Kit has a top mark (an upside down V which is between 3 screw holes) which is an indicator that represents that this is the top and the wheel.
- **Please note:** some cars horn contacts need to be removed from the original steering wheel and place on the bottom of the new boss kit such cars are; Old Holden's (Premier, Kingswood etc.) Commodores (VB – VL etc.) and some others.
7. Bolt the steering wheel to the boss kit and slide it onto the shaft. Once it gets tight, tighten the nut so it makes a good contact with the taper on the shaft Taking into account not to over tighten it.
8. Drive the car very carefully over 100 meters driving slowly, This is enough to determine whether or not the steering wheel is straight and in line.
9. After the road test retighten the nut according to the cars specifications normal setting.(this is very important and all care and responsibility should be taken if unsure consult a professional)
10. To Connect A horn button this may require 1 of the 2 process below:
 - 1st Process - If no horn dress ring is supplied with the wheel hook up the wires to the horn button and push into position. Press to see if horn works if not reverse the wires on the button.
 - 2nd Process – If there is a dress ring you will have to remove the steering wheel from the boss kit. Next step is to carefully hook up the wires to the horn button, another set of hands may be required to help do this so when your attaching the dress ring over the horn button and placing it on top of the wheel this is so you can screw in the Allen keys to the boss kit

IMPORTANT: If you have to remove a SAAS Aftermarket Steering Wheel from your Vehicle, ensure to use a suitable steering wheel puller (do not use two hands to pull off the wheel). Failing to do this may result in Damage to the Wheel (Especially for Wooden Steering Wheels), THIS WILL VOID YOUR GUARANTEE.

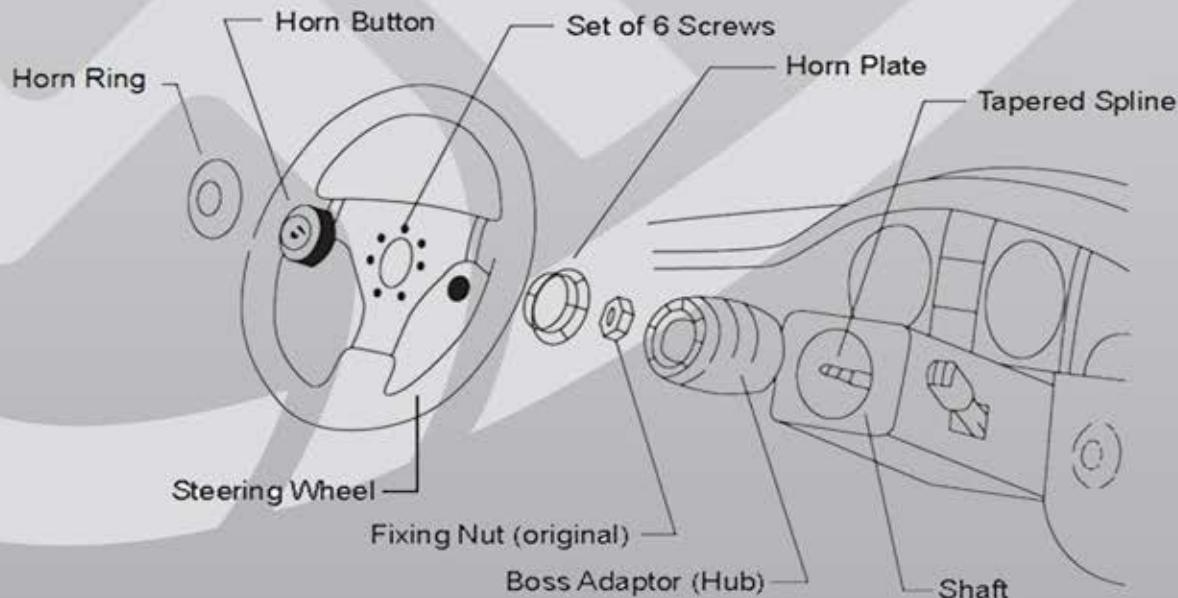


Illustration of an Aftermarket Steering wheel Installation